

INSTALLATION AND MAINTENANCE MODEL ST GRAVITY VENTILATOR

This publication contain the installation, operation and maintenance procedures for standard units of the Romlair Model ST gravity ventilators

Romla Ventilator Company catalog G95 provides additional information describing the equipment, performance, available accessories and specification data.

For additional safety information, refer to AMCA publication 410-96, *Safety Practices for Users and Installers of Industrial and Commercial Fans*.

All the publications listed above can be obtained from Romla Ventilator Company by phoning 619-946-1224; by Fax 619-946-1227

RECEIVING AND INSPECTION

Carefully inspect the unit for any damage and shortage immediately upon receipt of the unit and record on the Delivery Receipt any visible sign of damage.

HANDLING

Lift the unit by the base or shipping or crate. Never lift by the hood. When lifting multiple section units, always lift each section seperately.



Model ST

OVERSIZED UNITS

Almost no field assembly is required with the exception of joining the ventilator at the curb as shown in Figure 1

On multiple section units, place the two units together on the roof curb and install the hem strip. Secure with tex screws (supplied by others).

STORAGE

If the unit is stored for any length of time prior to installation, store it in its original shipping crate and protect it from dust debris and the weather.

